

TABLE JACK™

PATENT PENDING


Installations Instructions

There are three types of table legs to which the Table Jack can be attached: **1** Inset Table Leg; **2** Flush Table Leg; or **3** Raised Table Leg. Please check to see to which version of table leg you will be installing the Table Jack.

Fits bottom table widths up to 2 1/4" wide.


Step 1

Turn table over and remove the four table glide screws from each leg. Install the 3 black table glides to three of the four table legs using 3 (1/4" x 20" x 1 3/4") screws. If the table bottom is inset, install the included spacers on each glide.

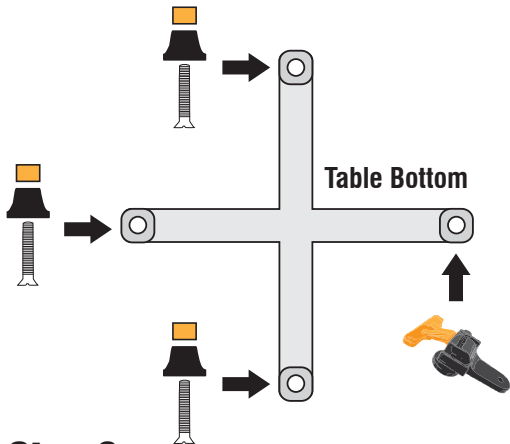

Step 2

Based on the type of table leg, refer to the drawings on the right for the necessary parts that need to be installed.

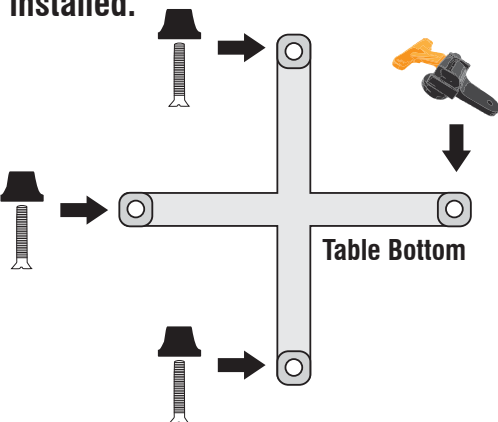

Instruction videos can be found at www.tablejacks.com

PARTS LIST

1 - Table Jack



3 - Glides



2 - Spacer Clips



1 - Flat Washer




1 - Rounded Screw
(1/4" x 2" x 3/4")



3 - Flat Head Screws
(1/4" x 20 x 1 1/2")



3 - Flat Head Screws
(1/4" x 20 x 1 3/4")

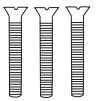

4 - Spacers



HARDWARE NEEDED

Phillips Screwdriver (not included)

